



7-piece Counter-Height Round Drop-leaf Dining Set

ITM. / ART. 2000708
Model # CSC7PCHD-1N
USE AND CARE GUIDE

**IMPORTANT, RETAIN FOR FUTURE
REFERENCE: READ CAREFULLY**


If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please call our toll-free customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-877-494-2536 (English, French and Spanish)

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday to Friday
(In U.S. and Canada only)

Or visit our website www.baysidefurnishings.com

For customer service outside of North America, please e-mail your request to
parts@baysidefurnishings.com

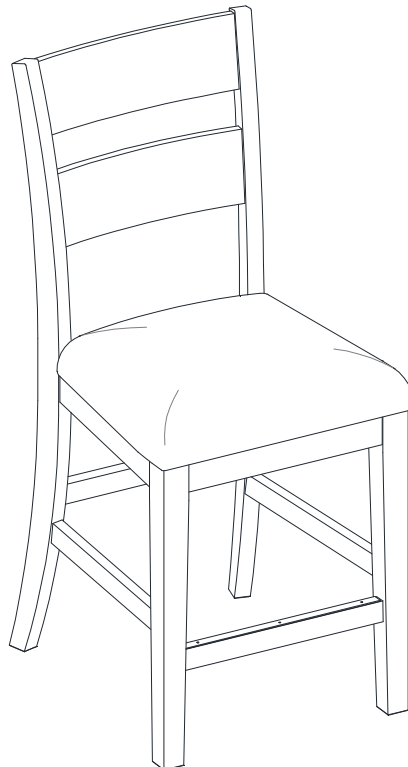

INFORMATION FOR USE

1. This chair is for indoor domestic use. Please use it only on smooth, even flooring.
2. Please check that all bolts, screws and knobs are tight at least every 3 months or as needed.
3. If parts are missing, broken, damaged or wrong, please stop using this product until repairs are done by a trained person.



- Do not stand or step on this chair. Do not use this chair as a stepladder.
- Do not sit on the front edge of the chair.
- Use only for seating, one person at a time.
- Use over smooth, level, seamless surfaces only.
- Do not use this chair unless all bolts, screws and knobs are firmly secured.
- Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
- Use this chair for its intended purpose only.
- Use mild detergent only for cleaning.
- Failure to follow these warnings could result in serious injury.
- Maximum load weight 136 kg / 300 lb



THIS UNIT IS INTENDED FOR USE ONLY WITH THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY CAUSING POSSIBLE INJURY.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further Advice about Wood Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

We hope you enjoy your purchase for many years.

Thank you for your purchase!

MADE IN VIETNAM / FABRIQUÉ AU VIETNAM / HECHO EN VIETNAM